

DAYTIME RUNNING LIGHT RELAY

ON-VEHICLE INSPECTION

1. INSPECT DAY TIME RUNNING LIGHT RELAY

- Remove the No. 2 relay, No. 3 relay and No. 4 relay from the engine room No. 2 relay block.
- Measure the resistance of the relays.

Standard resistance:

No. 2, No. 4

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

No. 3

Tester Connection	Specified Condition
4 - 5	Below 1 Ω
4 - 5	10 kΩ or higher (Battery voltage applied to terminals 1 and 2)
3 - 5	Below 1 Ω
3 - 5	10 kΩ or higher (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

